



Code:	Designation:	Position:
A1	Instrument cluster	61 K
A1e3	High beam indicator lamp	61 J
A51	Rear axle sensor (headlamp range adjustment)	19 J
A52	Front axle sensor (headlamp range adjustment)	78 C
E1	Left front headlamp unit	28 K
E1e3	Standing and parking lamp	25 J
E1e7	Left additional headlamp high beam	27 J
E1e8	Low beam xenon headlamp	29 J
E1m1	Left headlamp range adjustment motor	31 J
E1n1	Xenon headlamp control module	29 J
E1n2	Xenon headlamp ignition module	29 J
E1r1	Headlamp flasher suppression relay	23 J
E2	Right front headlamp unit	68 K
E2e3	Standing and parking lamp	64 J
E2e7	Right additional headlamp high beam	65 J
E2e8	Low beam xenon headlamp	68 J
E2m1	Right headlamp range adjustment motor	71 J
E2n1	Xenon headlamp control module	67 J
E2n2	Xenon headlamp ignition module	67 J
E2r1	Headlamp flasher suppression relay	62 J
F1	Fuse and relay module	1 C
F1	Fuse and relay module	11 C
F1	Fuse and relay module	21 C
F1	Fuse and relay module	31 C
F1	Fuse and relay module	41 C
F1	Fuse and relay module	51 C
F1	Fuse and relay module	60 C
F1f12	Fuse 12	24 D
F1f23	Fuse 23	10 C
F1f24	Fuse 24	63 D
F1f47	Fuse 47	54 D
F1k12	Circuit 15 relay	6 D
F1k13	Circuit 58L relay	21 D
F1k30	Front fog lamp relay	51 D
F1k9	Circuit 58R relay	58 D
F2	Fuse and module box in right front footwell	55 H
F2f20	Fuse 20	57 G
F2f21	Fuse 21	58 G
F2k6	Relay 6	55 G

Code:Designation:Position:

G1	Battery	5 H
N10	All-activity module	2 A
N10	All-activity module	11 A
N10	All-activity module	21 A
N10	All-activity module	31 A
N10	All-activity module	41 A
N10	All-activity module	51 A
N10	All-activity module	61 A
N10	All-activity module	14 D
N10/1	Extended Activity module (EAM)	25 H
N10/1	Extended Activity module (EAM)	40 D
N10/1	Extended Activity module (EAM)	68 C
N71	Headlamp range adjustment control module	14 L
N71	Headlamp range adjustment control module	24 L
N71	Headlamp range adjustment control module	34 L
N71	Headlamp range adjustment control module	44 L
N71	Headlamp range adjustment control module	54 L
N71	Headlamp range adjustment control module	64 L
N71	Headlamp range adjustment control module	73 L
S2	Starter switch	4 L
S4	Combination switch	43 K
S4s2	Headlamp flasher/high beam switch	48 J
S4s3	Light switch	44 J
U1	Valid for USA	23 H
U1	Valid for USA	62 H
U436	Valid for PTS and Xenon	40 G
U437	Not valid for PTS	41 G
W16/4	Ground (output ground - component compartment - right)	7 L
W2	Ground (at right headlamp unit)	65 F
W2	Ground (at right headlamp unit)	67 F
W29/2	Ground (right A-pillar)	9 E
W9	Ground (at left headlamp unit)	27 F
W9	Ground (at left headlamp unit)	29 G
W9	Ground (at left headlamp unit)	53 E
X11/4	Data link connector	11 F
X12/12	Circuit 30 terminal block at relay module 1	3 E
X12/13	Circuit 15 terminal block at relay module 1	5 E
X12/14	Circuit 31 terminal block at relay module 1	6 E
X12/6	Circuit 31 terminal block at relay module 2	59 K

Code:	Designation:	Position:
X12/7	Circuit 15R terminal block at relay module 2	57 K
X12/8	Circuit 15 terminal block at relay module 2	58 K
X12/9	Circuit 30 terminal block at relay module 2	58 K
X18	Interior and taillamp harness connector, cockpit	57 E
X26	Engine compartment/cockpit connector	14 H
X26	Engine compartment/cockpit connector	29 F
X26	Engine compartment/cockpit connector	37 F
X26	Engine compartment/cockpit connector	61 F
X26	Engine compartment/cockpit connector	69 G
X26	Engine compartment/cockpit connector	77 G
X26/32	Front engine compartment/bumper connector	53 K
X4/37	Terminal block (circuit 30)	4 G
Z50/14	Cockpit connector sleeve (circuit 56b)	40 H
Z50/17	Cockpit connector sleeve, instrument cluster/headlamp adjusting range [LWR] diagnosis	11 H
Z50/3	Cockpit connector sleeve (circuit 31, I left)	8 H
Z50/31	Cockpit connector sleeve, circuit 56A	37 H
Z50/31	Cockpit connector sleeve, circuit 56A	60 F
Z50/33	Cockpit connector sleeve (unfused), circuit 58	44 F
Z50/4	Cockpit connector sleeve (circuit 31, II right)	8 F
Z50/5	Cockpit circuit 30 connector sleeve	3 G
Z50/5	Cockpit circuit 30 connector sleeve	49 F
Z50/6	Cockpit connector sleeve (circuit 15C)	1 H
Z50/9	Cockpit connector sleeve (circuit 15 II)	2 F
Z56/1	Left engine compartment connector sleeve, circuit 31 (I)	27 G
Z56/1	Left engine compartment connector sleeve, circuit 31 (I)	53 G
Z57/1	Right engine compartment connector sleeve, circuit 31 (I)	65 G

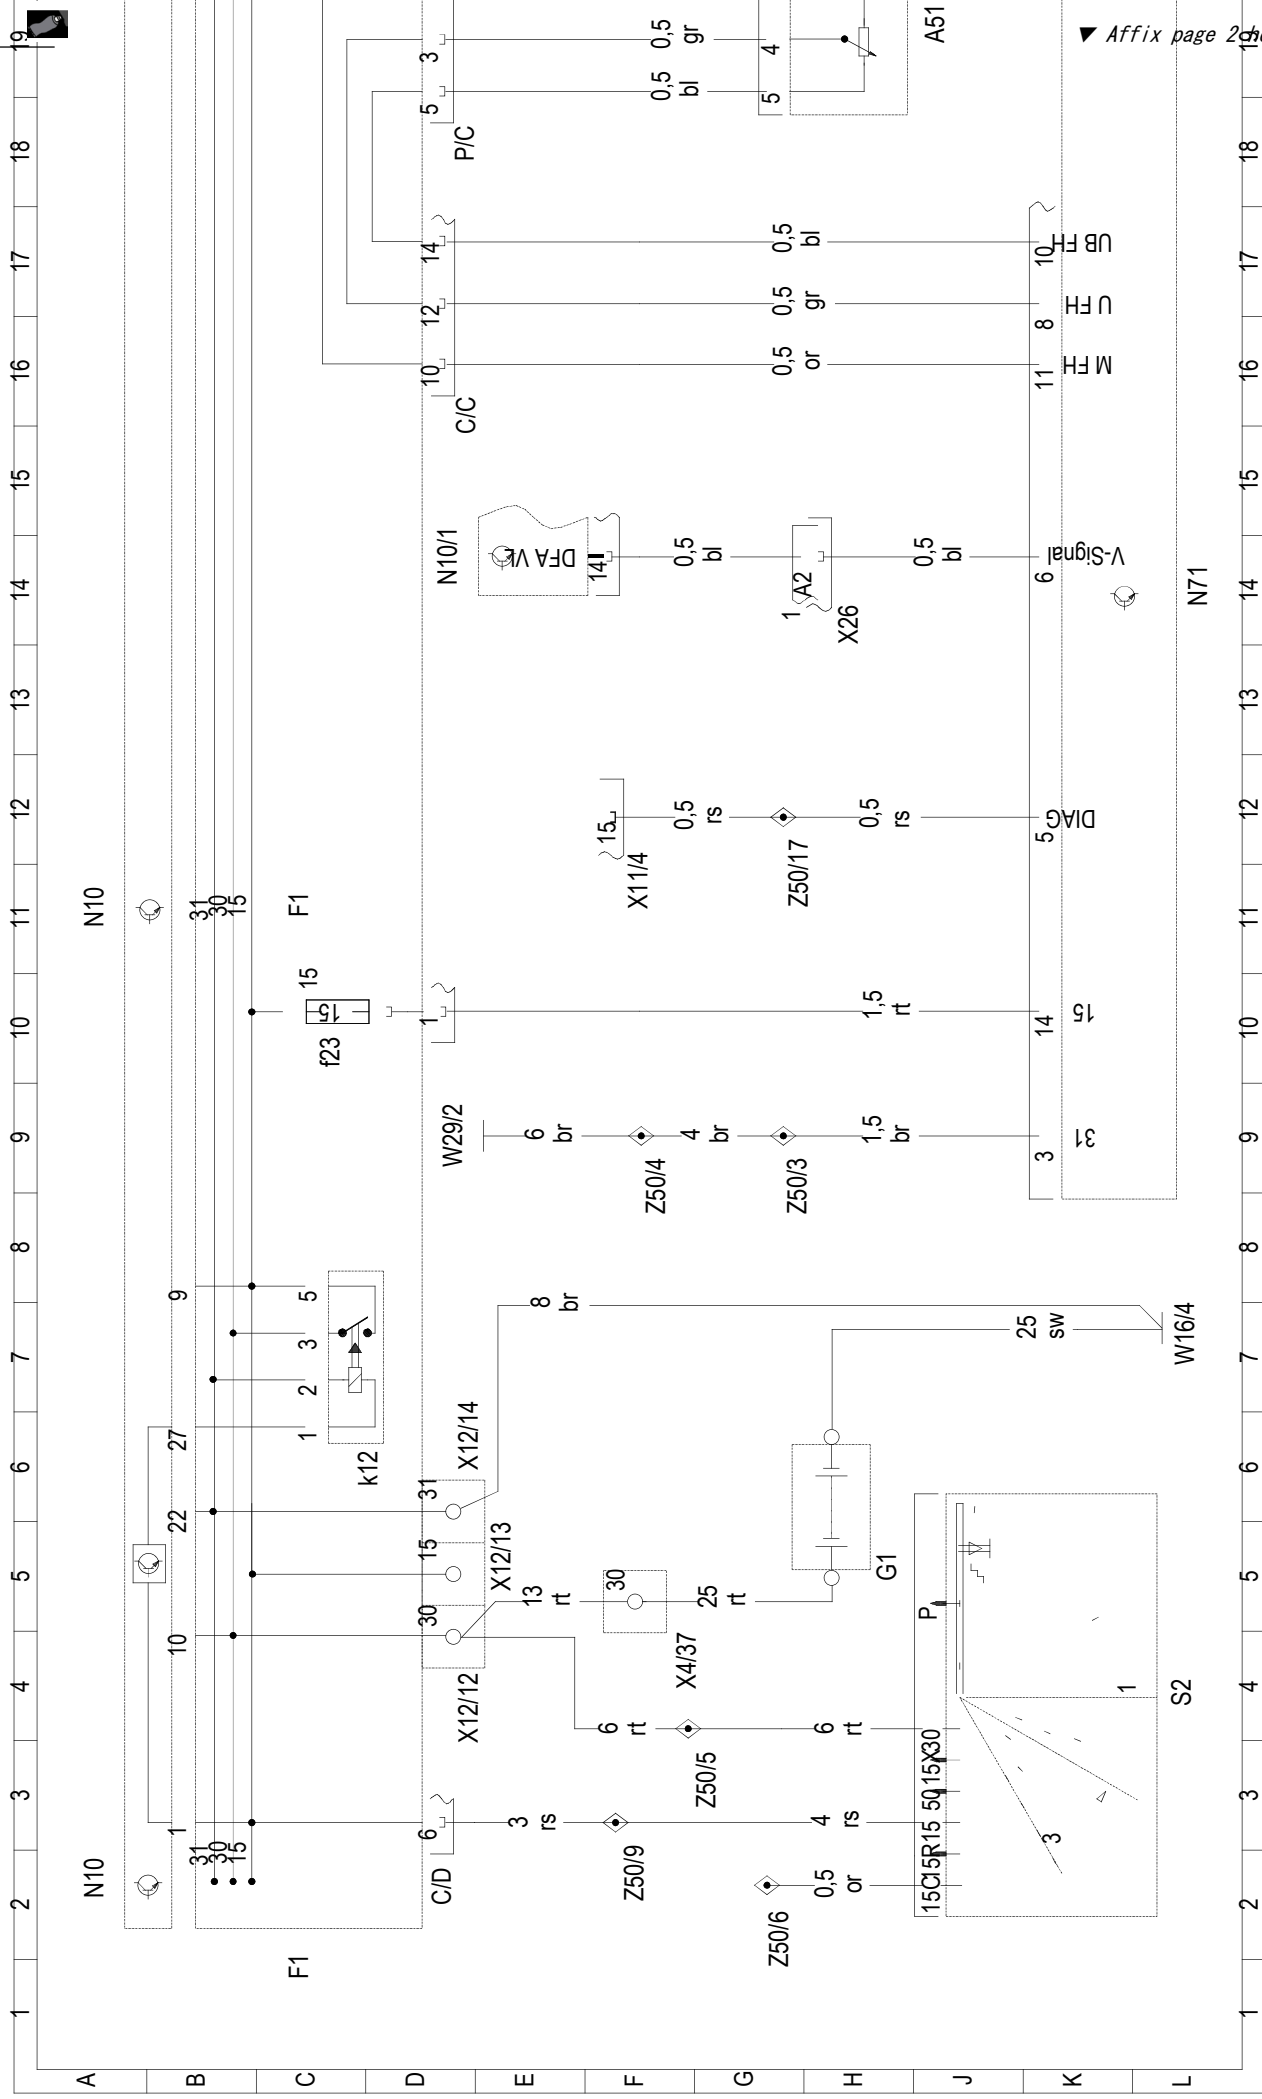

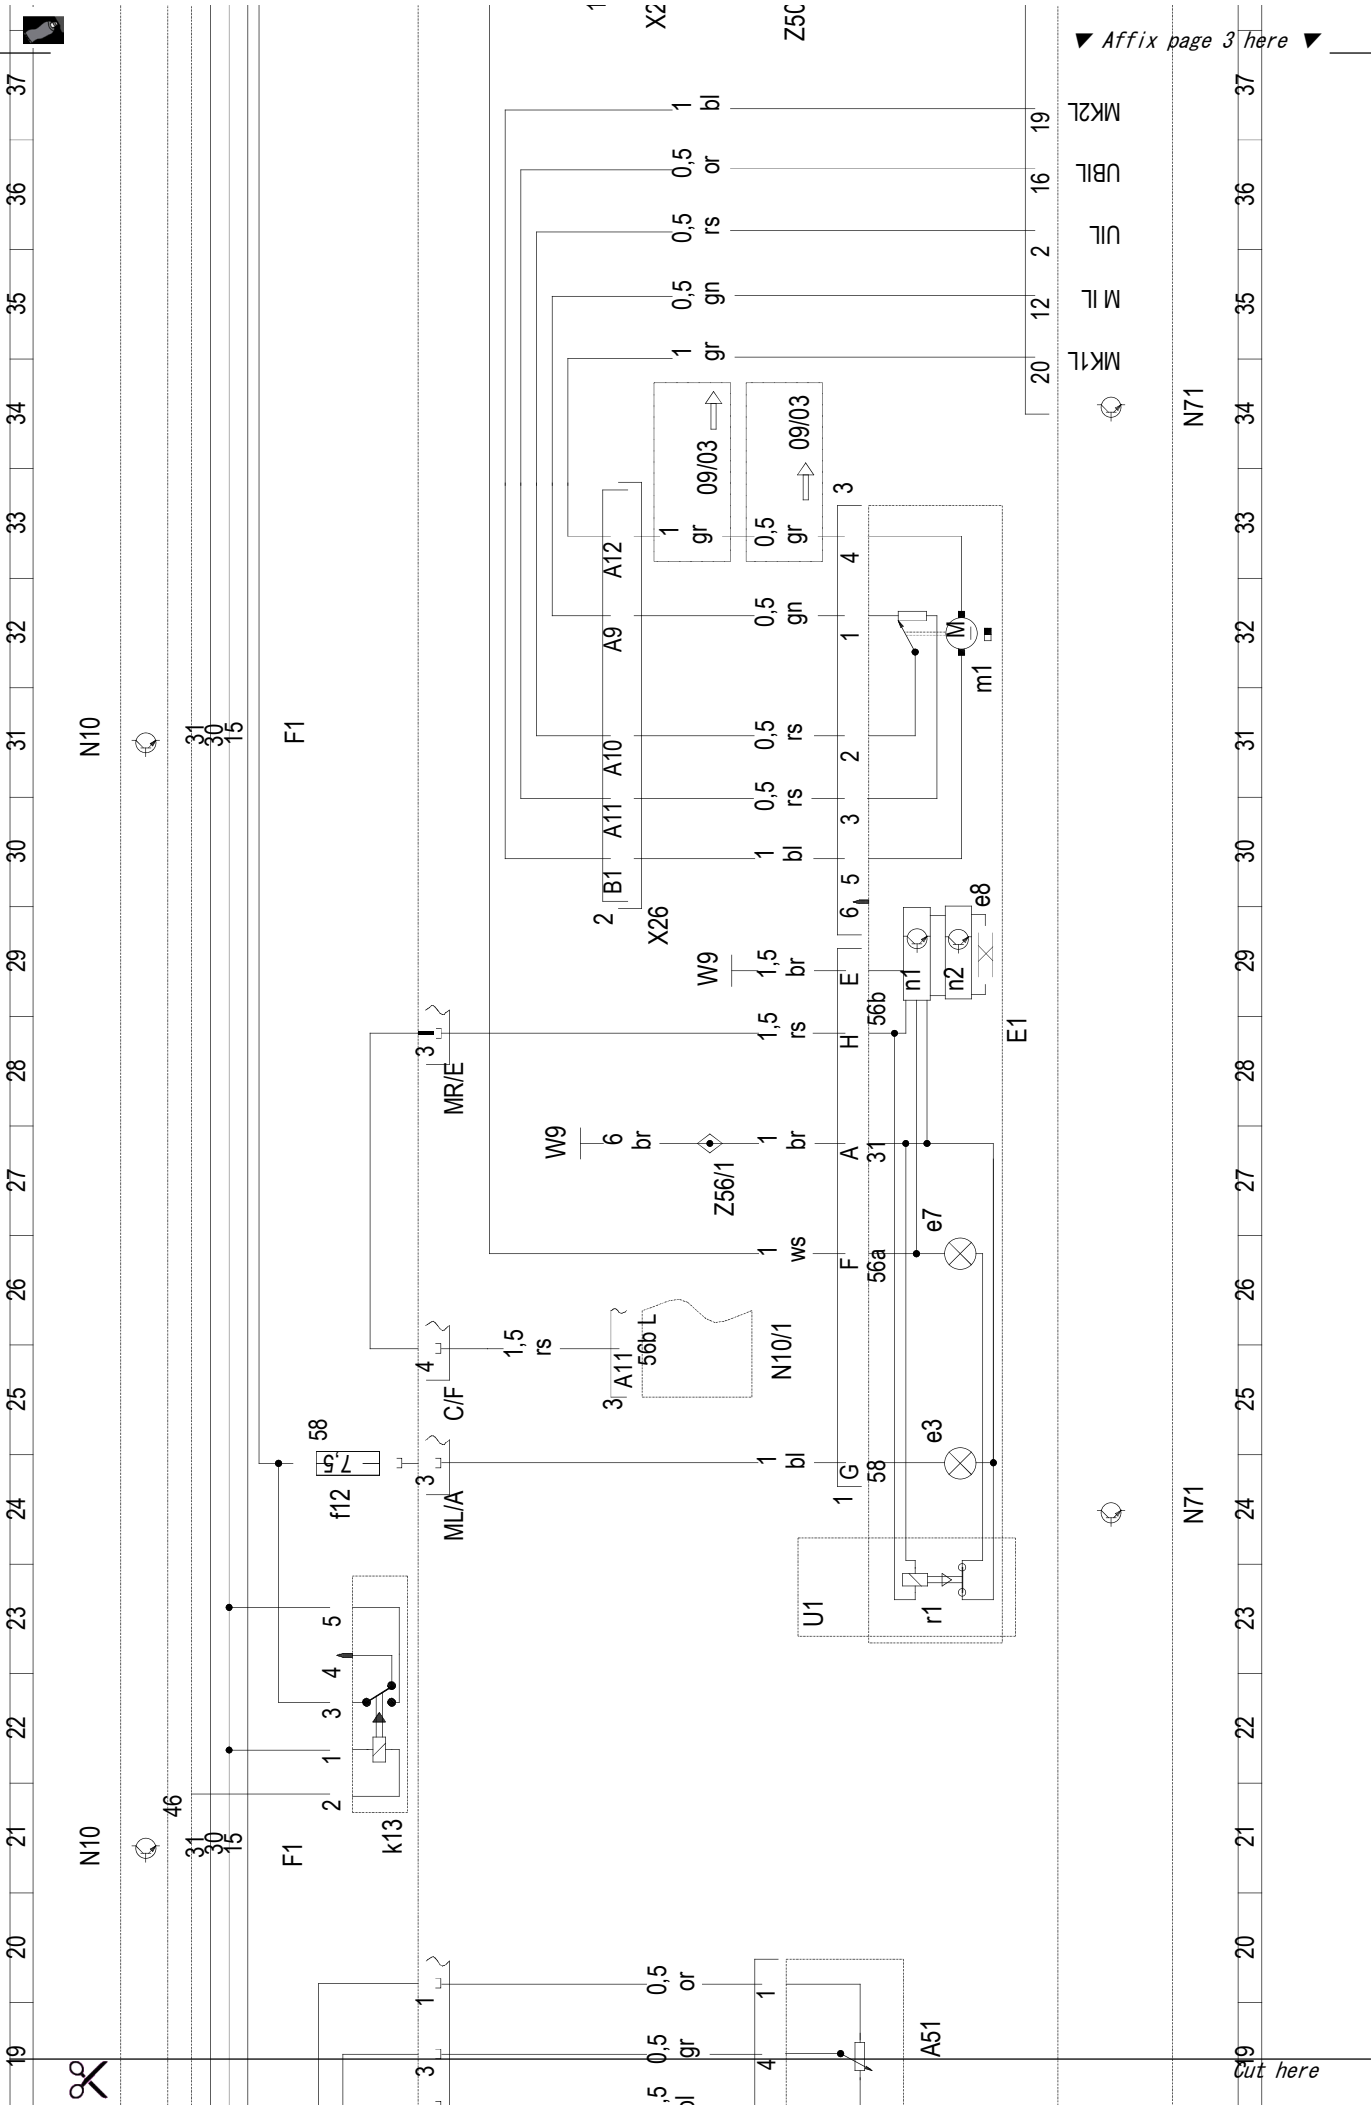

▼ Affix page 3 here ▼

