


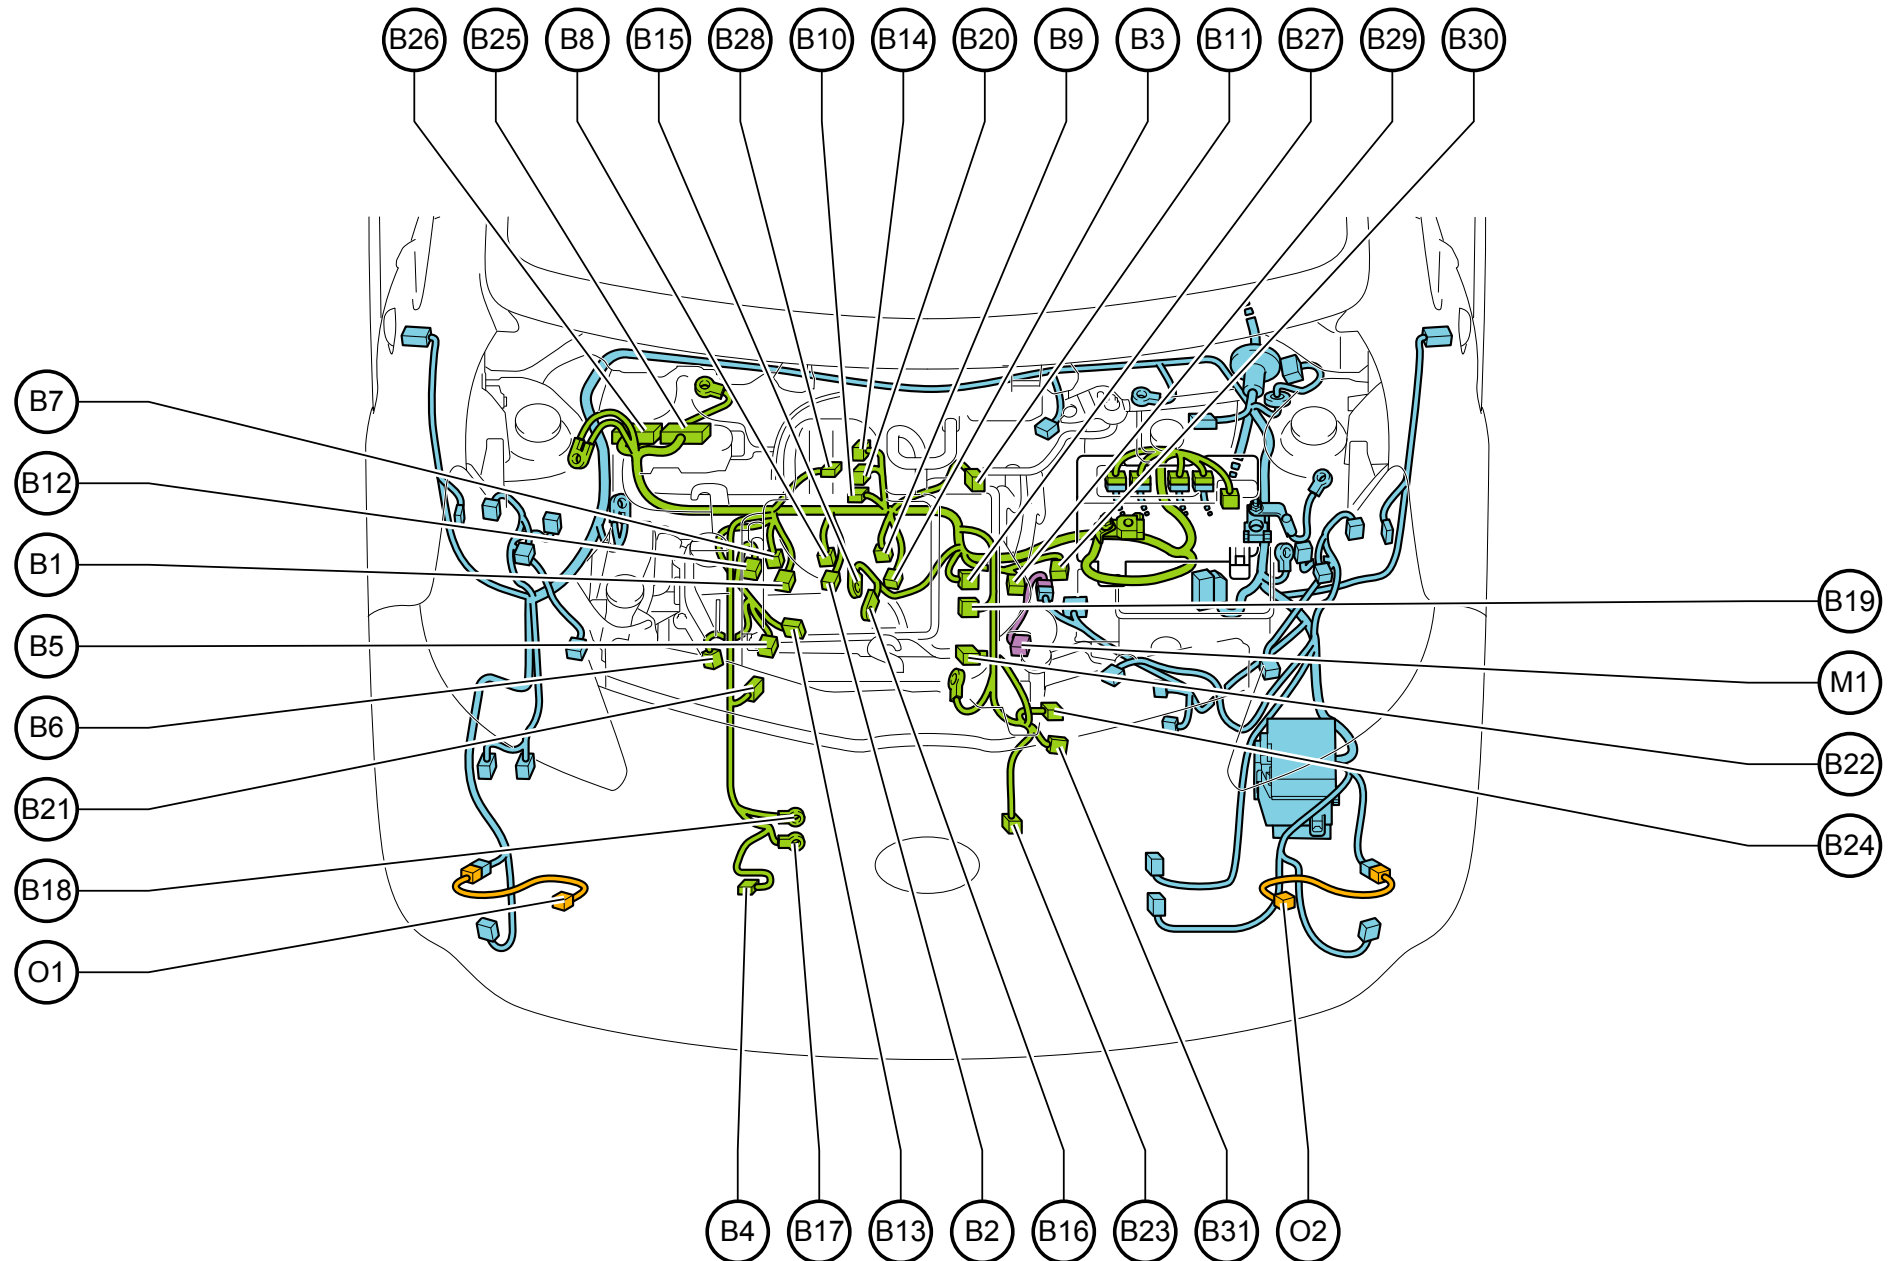


- B 1 Ignition Coil (No.1)
- B 2 Ignition Coil (No.2)
- B 3 Ignition Coil (No.3)
- B 4 A/C Compressor
- B 5 Engine Oil Pressure SW
- B 6 Crankshaft Position Sensor
- B 7 Fuel Injector (No.1)
- B 8 Fuel Injector (No.2)
- B 9 Fuel Injector (No.3)
- B 10 Throttle Body Assembly
- B 11 VSV (Purge)
- B 12 Camshaft Timing Oil Control Valve
- B 13 Knock Control Sensor (Bank 1)
- B 14 Vacuum Sensor Assembly
- B 15 Starter
- B 16 Starter
- B 17 Alternator
- B 18 Alternator
- B 19 Camshaft Position Sensor
- B 20 Throttle Body Assembly
- B 21 Heated Oxygen Sensor (Bank 1 Sensor 1)
- B 22 Water Temp. Sensor
- B 23 Heated Oxygen Sensor (Bank 1 Sensor 2)
- B 24 Back-Up Lamp SW
- B 25 Engine ECU
- B 26 Engine ECU
- B 27 Clutch Actuator
- B 28 Throttle Body Assembly
- B 29 Select Actuator
- B 30 Shift Actuator
- B 31 Transmission Revolution Sensor

- M 1 Shift Stroke Sensor


- O 1 Daytime Running Lamp Assembly RH
- O 2 Daytime Running Lamp Assembly LH

Position of Parts in Engine Compartment <LHD 1KR-FE>

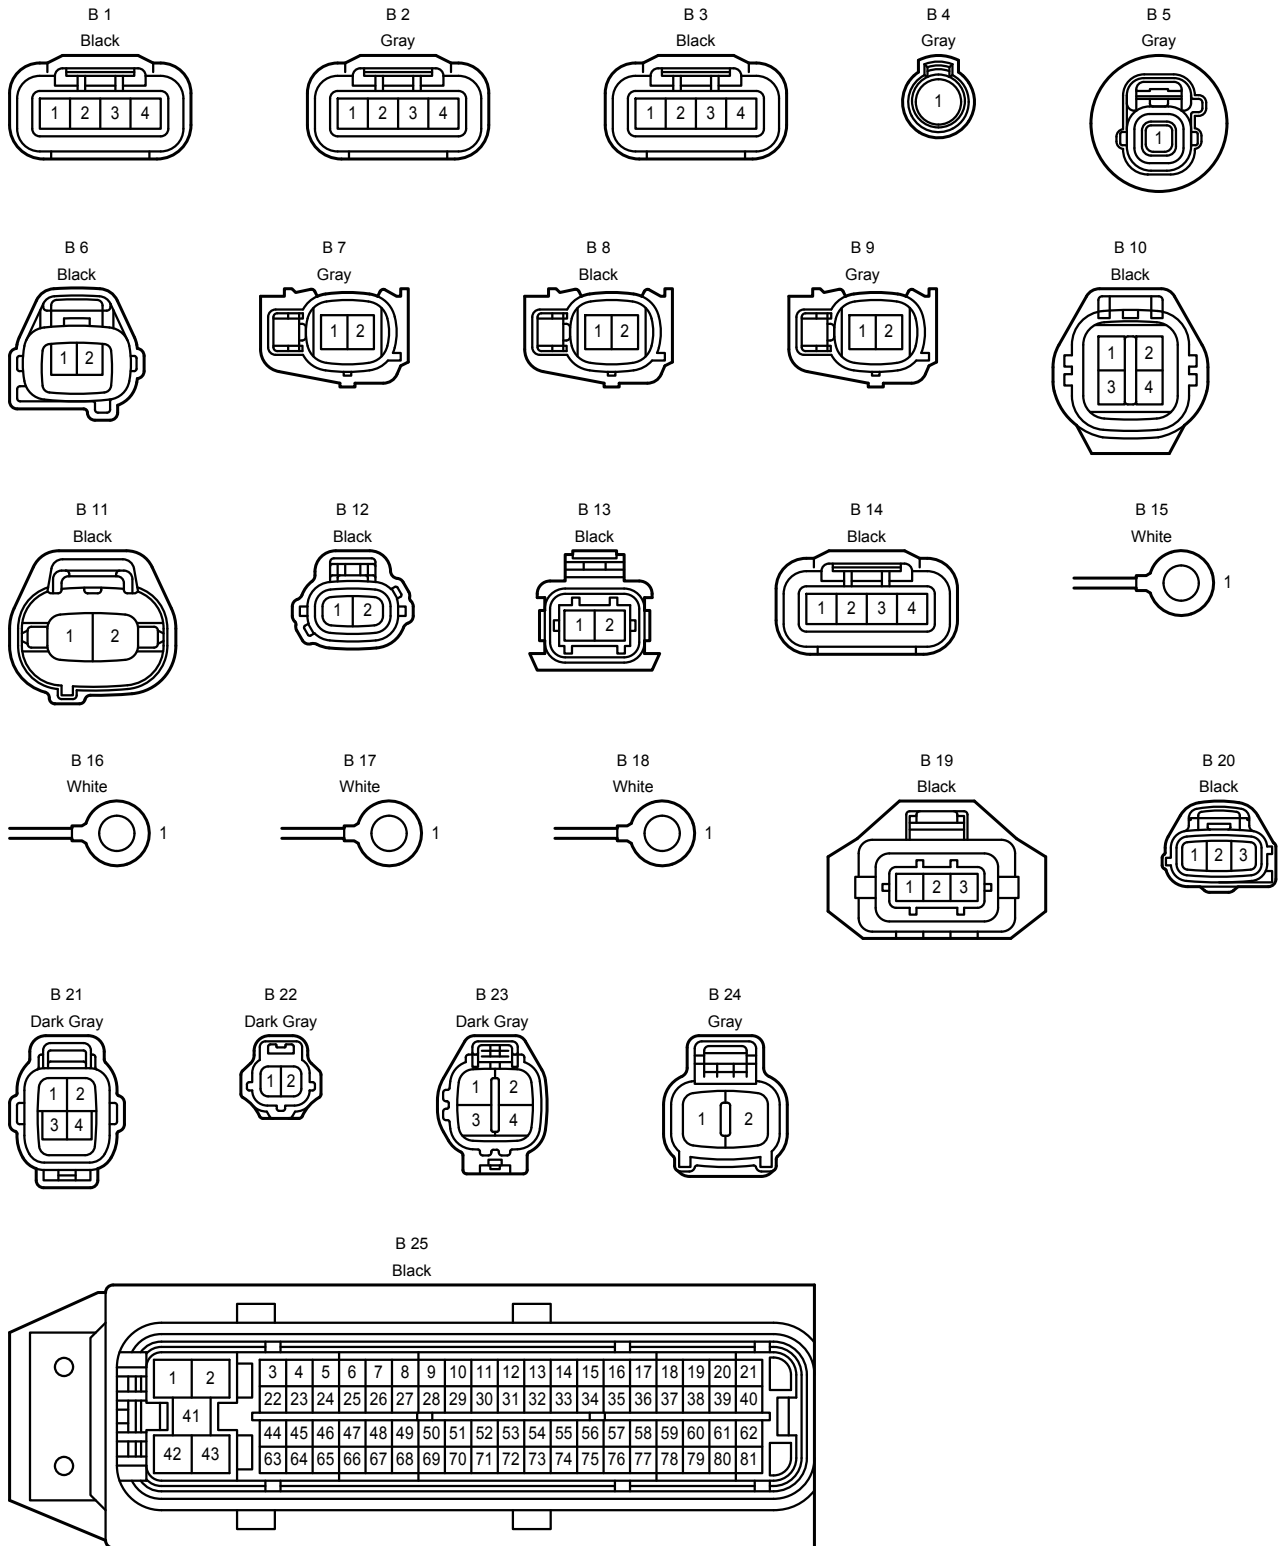

Position of Parts in Engine Compartment <LHD 1KR-FE>


B 26
Black

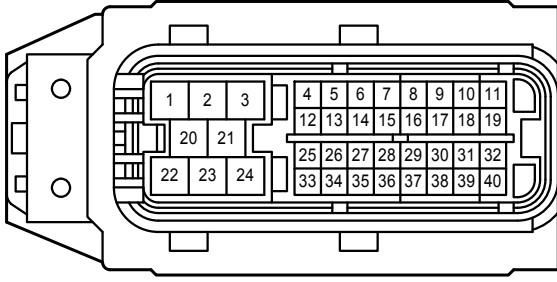

B 27
Black



B 28
Black

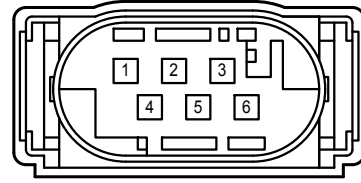

B 29
Black




B 30
Black




B 31
White



M 1
Black

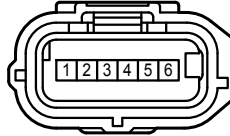

O 1
Black

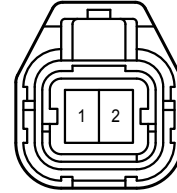

O 2
Black

